

HOUSING VENTILATION


Ref. EV-4

To provide air ventilation in the assembly, between two modular sections.

This is necessary to allow the exit of air from the interior of the system, preventing possible condensation. This is used in installations with different temperature changes, for example, systems with mixed zones of indoor and outdoor.

The component EV-4 must be mounted at the border of these different temperature zones with the housing ventilation on the outside.

The modular section is pre-prepared to allow connection to other sections.

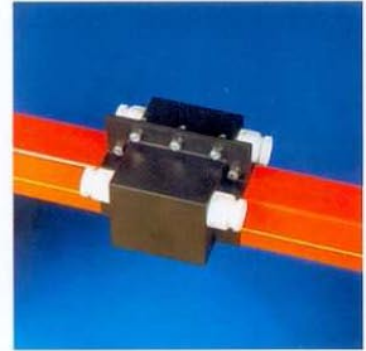

Ref. EV-4